


SENTINEL™ VACUUM CONTROLLERS – Mark II

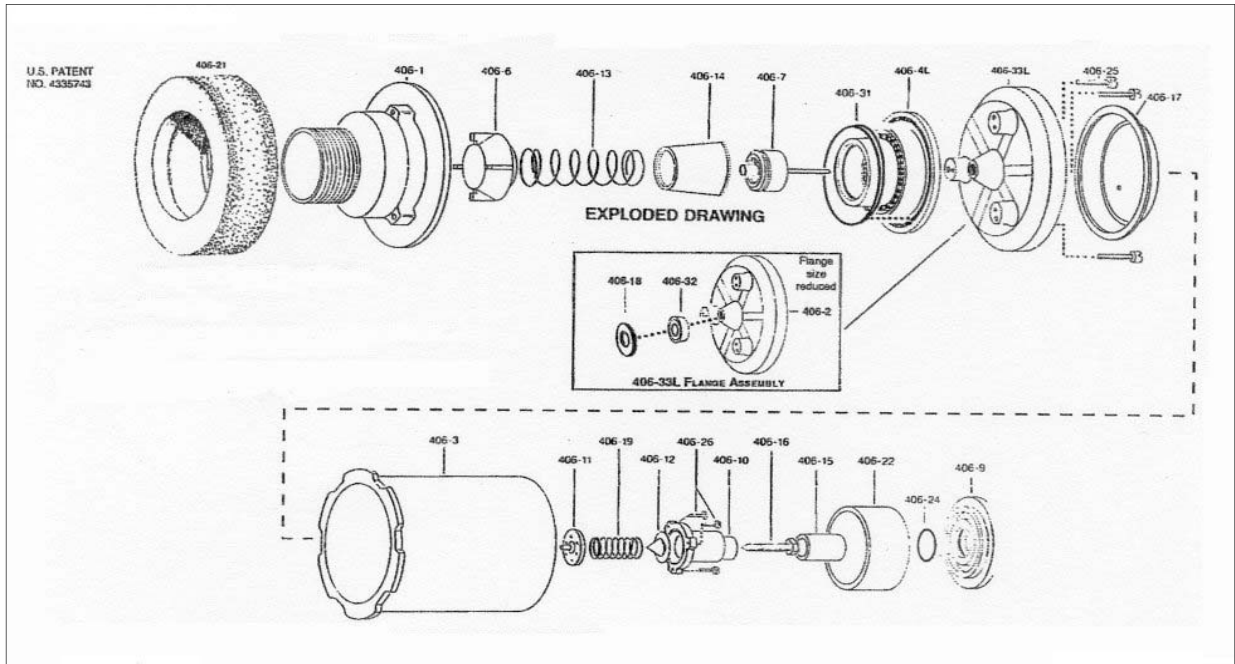

Sentinel Mark II - Parts Break-Down

Part#	Part Description	Part#	Part Description
406-01	Outlet Body	406-18	Retaining Washer
406-03	Dome	406-19	Adjustment Spring
406-04L	Flow Ring	406-21	Main Filter
406-06	Plug	406-22	Dome Filter
406-07	Poppet Assembly	406-24	"O" Ring
406-09	Filter Cap	406-25	Flange Screw (3 each)
406-10	Adjuster Housing	406-26	Adjuster Housing Screw (3 each)
406-11	Dome Diaphragm	406-31	Outlet Seal
406-12	Wobble Plate	406-32	Rod Seal
406-13	Closing Spring	406-33L	Flange Assembly
406-14	Rolling Seal	406-334L	Flange & Flow Ring Set
406-15	Adjusting Knob	PMM-M2	Parts & Maintenance Manual for the Mark II
406-16	Adjusting Screw		
406-17	Main Diaphragm		

Note: All Mark I parts are interchangeable with Mark II parts.



L. J. ENGINEERING, INC.

18192 Gothard Street
Huntington Beach, CA 92648 USA

Phone: 714-848-8001
In the USA: 1-800-635-6413
Fax : 714-848-0973

E-mail: info@sentinelproducts.com
Website: <http://www.sentinelproducts.com>